
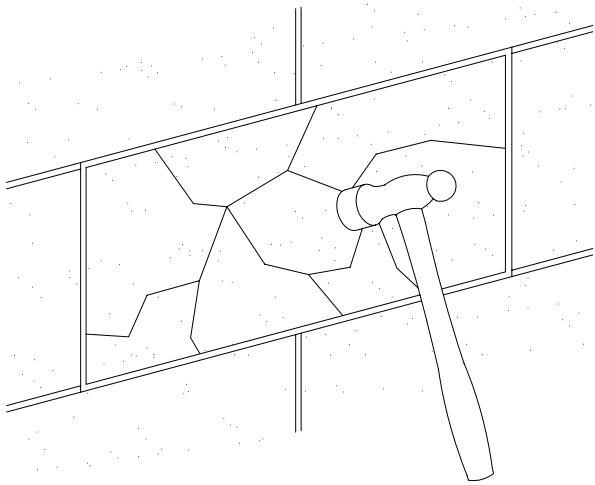


REMOVAL OF PANEL TO BE REPLACED

REMOVE JOINT MATERIAL
AROUND PERIMETER OF PANEL
TO EXPOSE EDGE:

1. REMOVE SILICONE BY
CUTTING WITH A SHARP BLADE.

2. REMOVE MORTAR WITH A
LIGHT CHISEL OR A CUTTING
WHEEL.

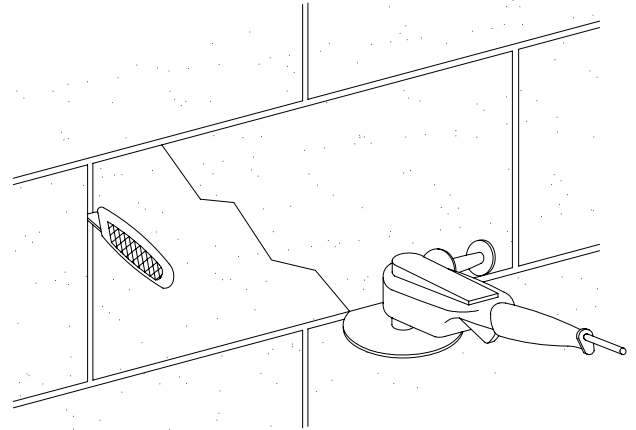

FRACTURE THE PANEL TO BE
REMOVED BY STRIKING IT NEAR THE
CENTER WITH SUFFICIENT FORCE TO
PROVIDE CRACKS EXTENDING TO
THE OUTSIDE EDGES.

WORK THE FRACTURED PIECES
LOOSE AND REMOVE, TAKING CARE
NOT TO DAMAGE THE ANCHOR
CHANNELS OR SURROUNDING
PANELS.

REMOVE ANY DEBRIS FROM THE
ANCHOR CHANNELS OR SHIM
CAVITY.

